



#### PARTS LIST

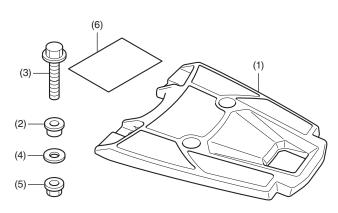

No.	Description	Qty
(1)	Rear carrier base	1
(2)	Collar	4
(3)	8 mm flange bolt	4
(4)	Washer	4
(5)	8 mm flange nut	4
(6)	URL paper	1

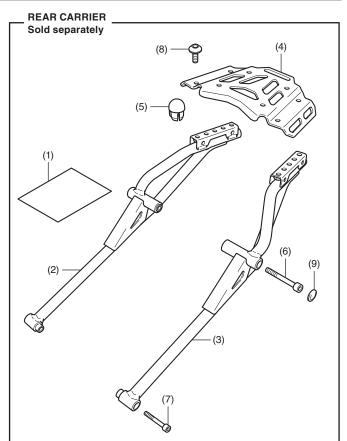

For the installation, refer to the Installation Instructions.

No.	Description	Qty
(1)	URL paper	1
(2)	Right rear carrier pipe	1
(3)	Left rear carrier pipe	1
(4)	Rear carrier plate	1
(5)	Rear cap	2
(6)	10 mm socket bolt	2
(7)	8 mm socket bolt (long)	2
(8)	8 mm socket bolt (short)	4
(9)	Socket bolt cap	4

#### **TOOLS REQUIRED**

Socket (12 mm) Ratchet Box wrench (12 mm) Torque wrench

# **TORQUE CHART**

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N∙m	kgf∙m	lbf·ft
8 mm flange nut	27	2.8	20

# MAXIMUM LOADING CAPACITY


• The weight of the cargo must not exceed the following maximum loading capacity:

Maximum Loading Capacity			
Top box		3.0 kg (6.6 lb)	


# INSTALLATION

### **A**CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.
- 1. Install the separately sold rear carrier.
- 2. Install the collars as shown.

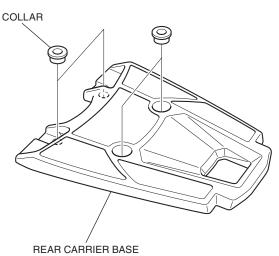

3. Install the rear carrier base as shown.

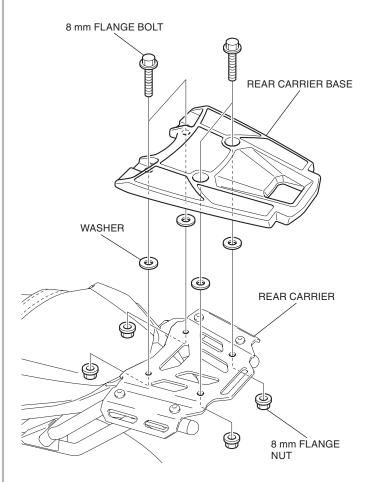

4. Refer to the Genuine Accessory User's Guide that comes together with the top box, and install the top box according to instruction.