

Honda Genuine Accessories

Applicable model
NC700X/XA/XD/S/SA/SD

ACC SOCKET INSTALLATION INSTRUCTIONS


Publications No.

Issue Date
December 2011

Honda Dealer:


Please give a copy of these instructions to your customer.

PARTS LIST

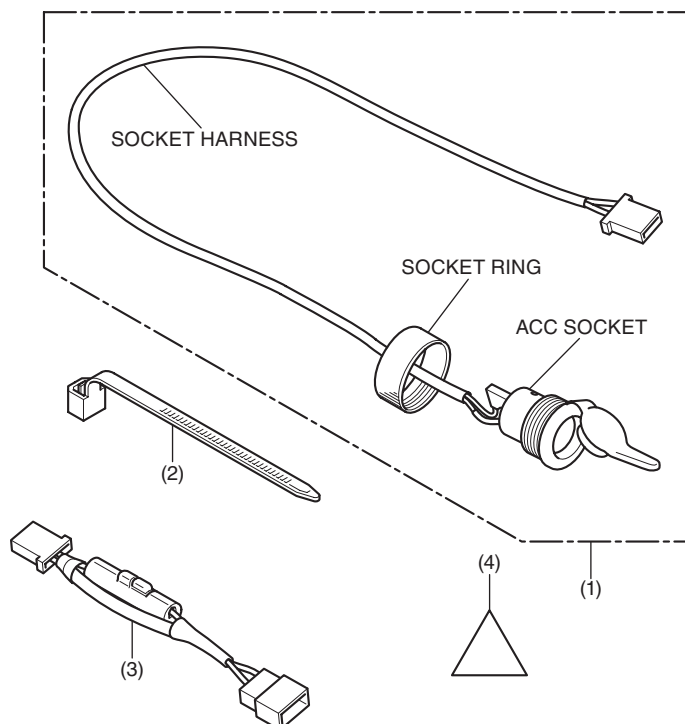


No.	Description	Qty
(1)	Socket assy.	1
(2)	Wire tie	1
(3)	ACC harness	1
(4)	Caution label	1

SUB HARNESS (NC700X/XA/XD)
Sold separately (P/N 08A71-MGS-D30)

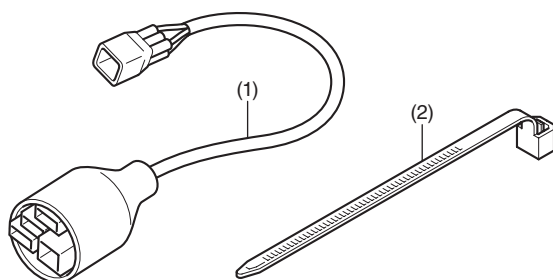


No.	Description	Qty
(1)	Sub harness	1
(2)	Wire tie	1

SUB HARNESS (NC700S/SA/SD)
Sold separately (P/N 08A71-MGS-D10)

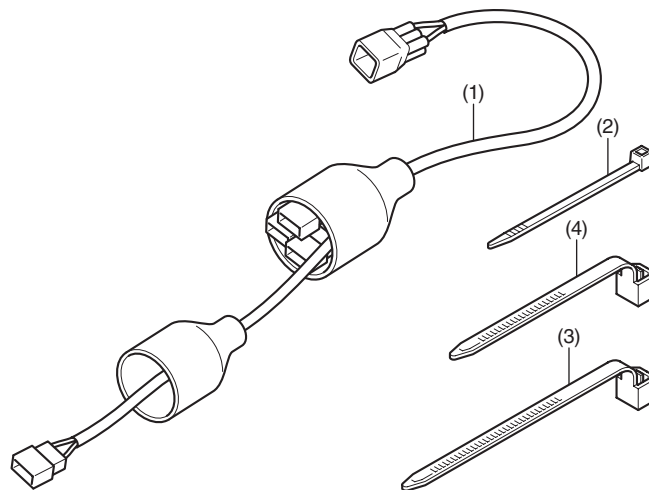

No.	Description	Qty
(1)	Sub harness	1
(2)	Wire tie (narrow) [Not used.]	1
(3)	Wire tie (long)	1
(4)	Wire tie (short)	2

RELAY SET
Sold separately (P/N 08A70-MGS-D30)

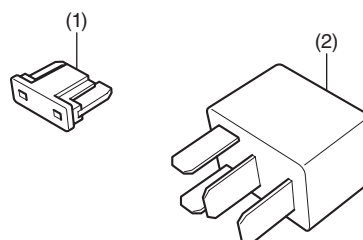

No.	Description	Qty
(1)	Fuse (7.5 A)	1
(2)	Relay	1

TOOLS AND SUPPLIES REQUIRED

Nippers
Electric drill
Hole saw (30 mm)
Awl
Scale
Electrical tape
Isopropyl alcohol
Shop towel

TORQUE INFORMATION

Refer to the Service Manual for the torque values of the removed parts.

USE AND CARE INFORMATION

- Check the accessory mounts frequently and retighten if necessary.
- Use a 1A fuse for replacement of the fuse of this accessory harness. Do not use any other fuse for replacement.
- Use a 7.5A fuse for replacement of the fuse of the Relay set. Do not use any other fuse for replacement.
- Use is possible up to a power input rating of 12 W (12 V, 1 A).
- Use with a running engine to prevent draining the battery.
- Switch the headlight to low beam. When used with the high beam setting it may empty the battery.
- Do not use a cigarette lighter, since this can cause a malfunction.
- When the accessory socket is not used, cover the socket with the cap to prevent entry of foreign objects.
- Please note that using the device while driving can lead to a malfunction, or it may drop off because of vibrations.
- Added accessories can affect a motorcycle's stability, performance and safe riding speed.

INSTALLATION INFORMATION

CAUTION:

- To prevent scalding, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

NOTE:

- The following accessories (sold separately) are required to install this accessory:
 - <NC700X/XA/XD>
 - Relay set (P/N 08A70-MGS-D30)
 - Sub harness (P/N 08A71-MGS-D30)
 - <NC700S/SA/SD>
 - Relay set (P/N 08A70-MGS-D30)
 - Sub harness (P/N 08A71-MGS-D10)
- The Relay set is not required for the motorcycle equipped with the Relay set.
- The Sub harness is not required for the motorcycle equipped with the Sub harness.
- Reinstall the removed parts on the motorcycle and make sure that the wires and harnesses are not pinched.
- Disconnect the negative cable from the battery before installing this accessory.
- The memory of the clock will be erased when you disconnect the battery. Reset the clock after reconnecting the battery.
- Trim the excess ends off the wire ties after attaching them to the wire harnesses. Do not allow the cut part of the wire tie to interfere with another harness or brake pipe.
- When replacing the accessory that is required to install this accessory, follow the instructions described in this installation instructions.

CONTENTS


Refer to the following page according to each model.

PREPARING THE RELAY SET	P.2
ACC SOCKET INSTALLATION <NC700X/XA/XD>	P.3
ACC SOCKET INSTALLATION <NC700S/SA/SD>	P.7


PREPARING THE RELAY SET

- **Illustration shows NC700XA type, other types are similar.**
- **These procedures are not required for the motorcycle equipped with the Relay set.**


1. Refer to the Service Manual for the motorcycle, remove the motorcycle parts, and disconnect the negative cable from the battery.

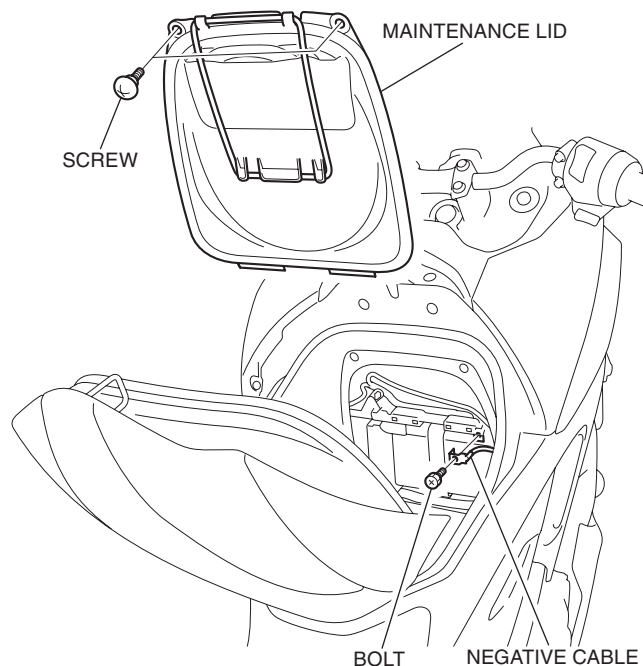

2. Remove the fuse box cover as shown.

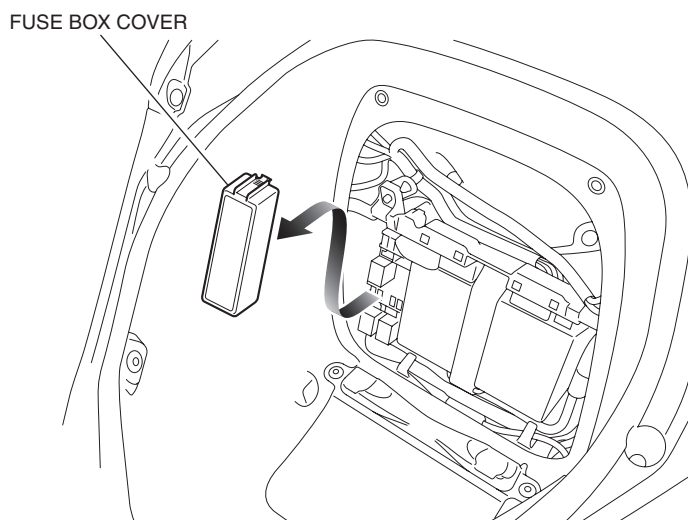


3. Install the relay and fuse in the position shown.

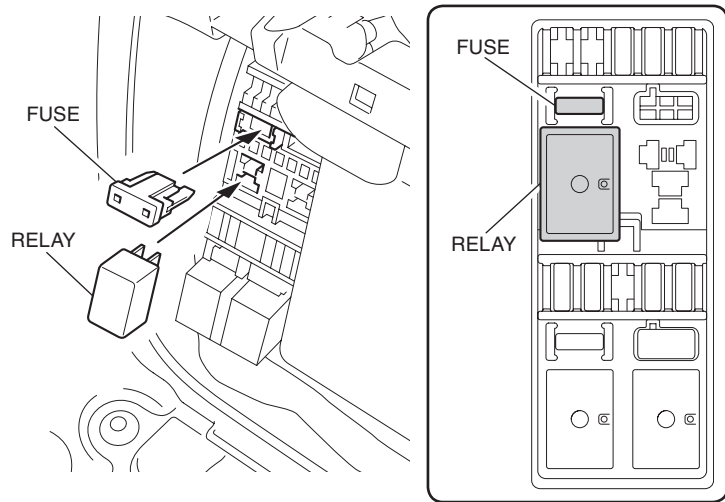


ACC SOCKET INSTALLATION <NC700X/XA/XD>


1. Refer to the Service Manual for the motorcycle, remove the motorcycle parts, and disconnect the negative cable from the battery.

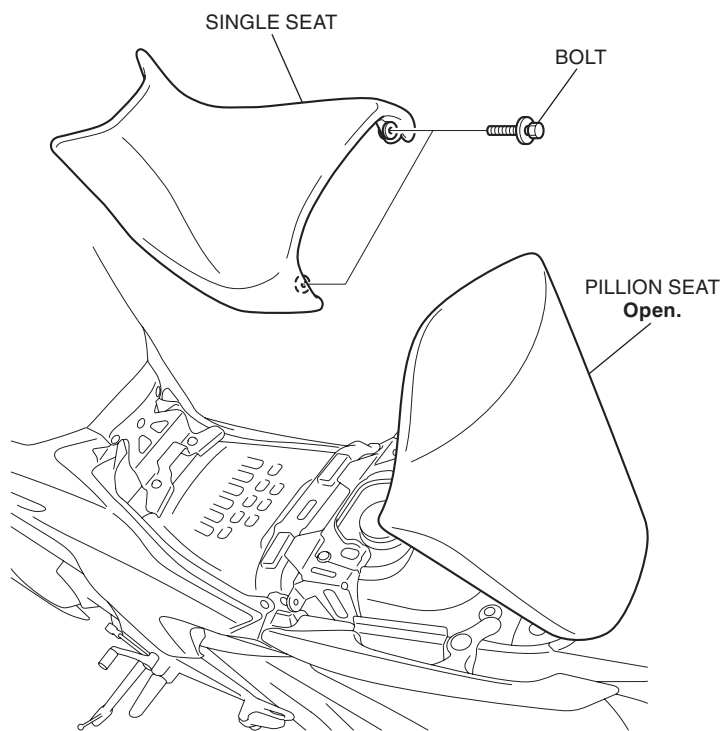


2. Refer to the Service Manual for the motorcycle, remove the motorcycle parts.

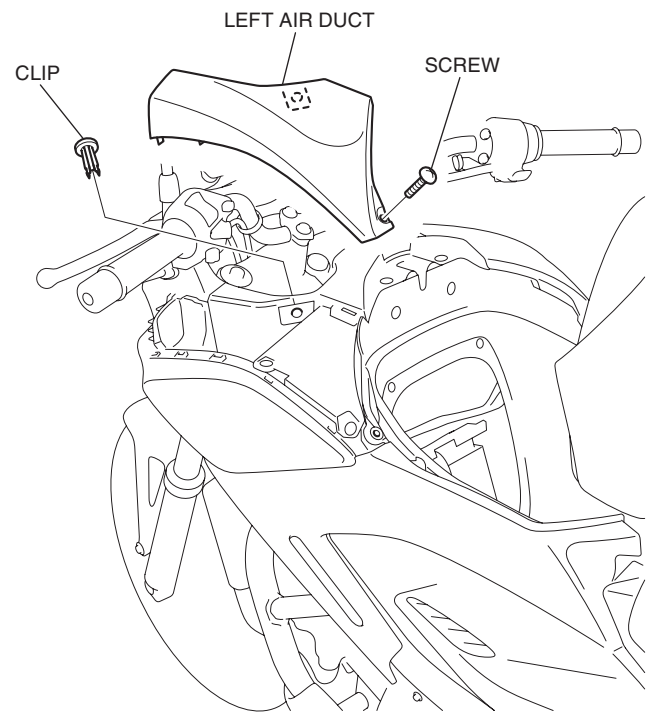


3. Remove the clip and open the front part of the left seat cowl slightly as shown.

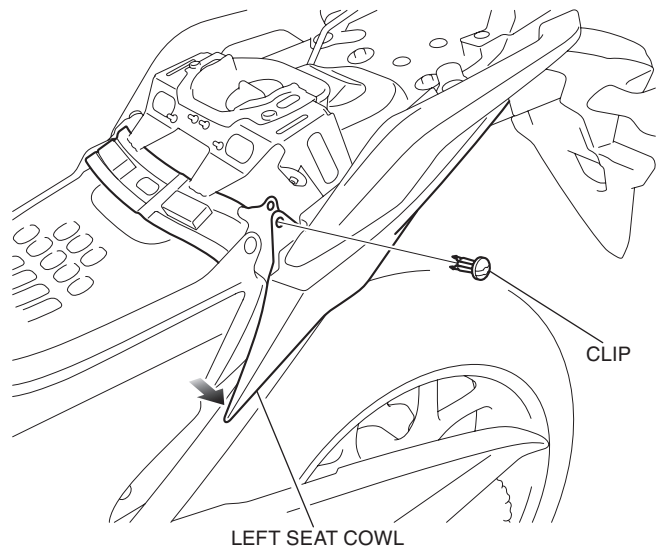

4. Refer to the Service Manual for the motorcycle, remove the motorcycle parts.

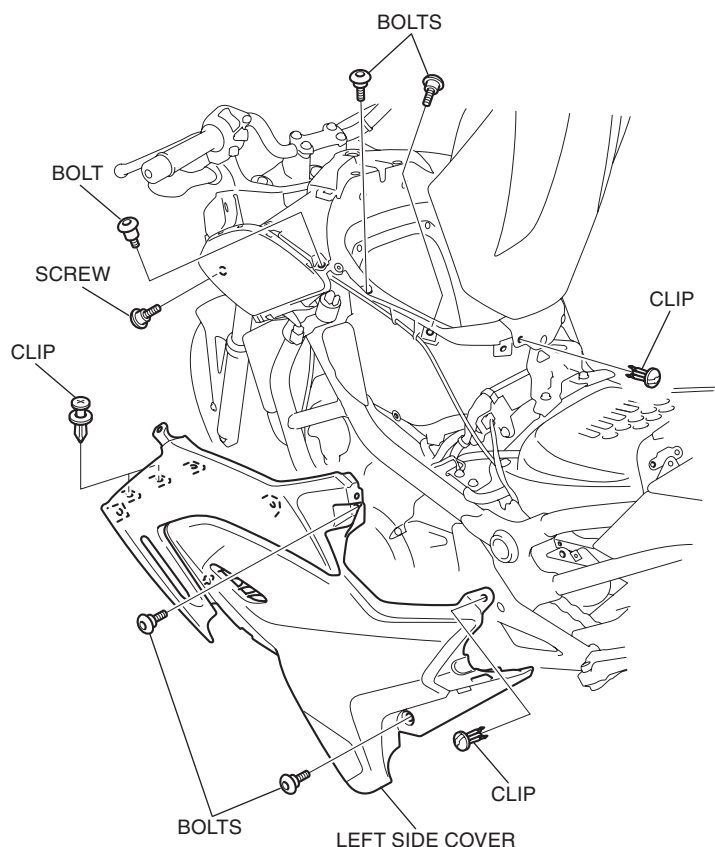



5. Refer to the Service Manual for the motorcycle, remove the motorcycle parts.

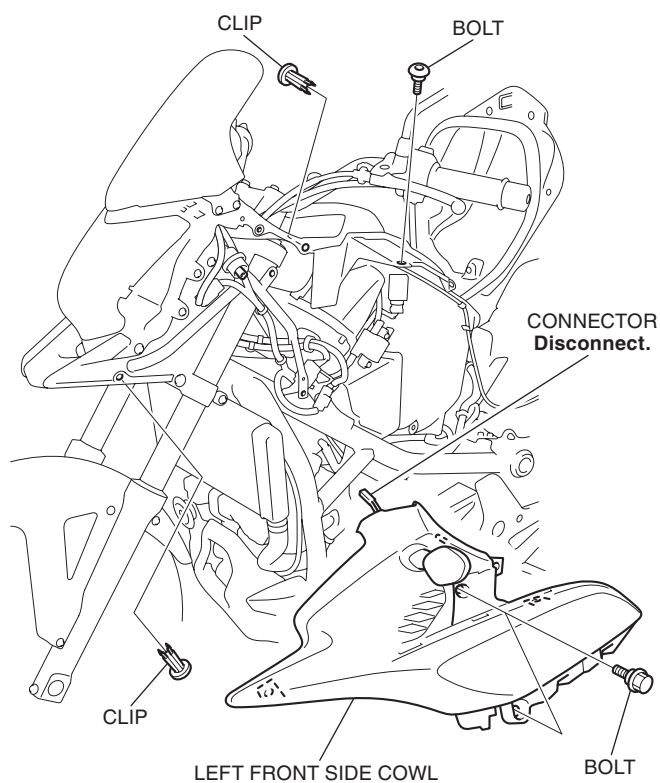

6. Drill a 30 mm hole along the factory marked line on the side of the luggage box using an electric drill and hole saw.


- Remove any burrs from the edge of the hole.

Mark with an awl in the position shown.

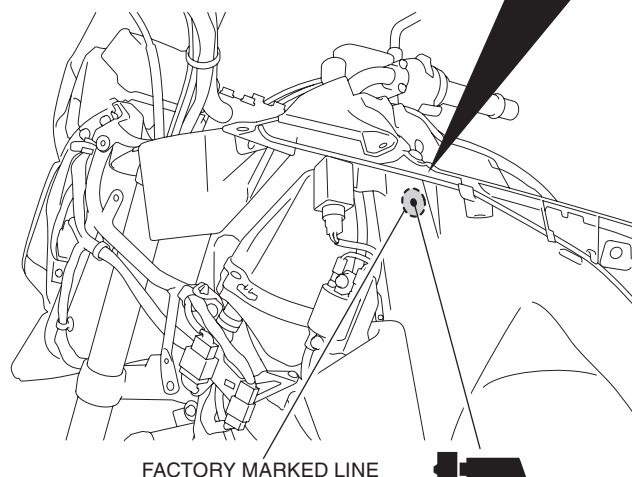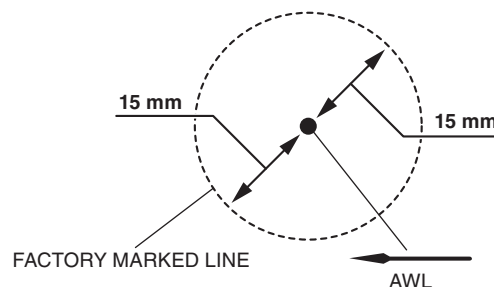


ELECTRIC DRILL
(30 mm HOLE SAW)
Drill at the marked point.

7. Install the ACC socket as shown.

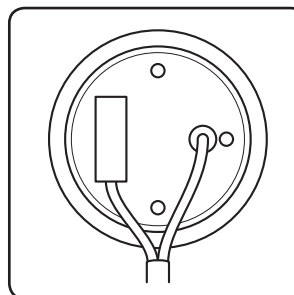


CAP
Close the cap when
it is not used.

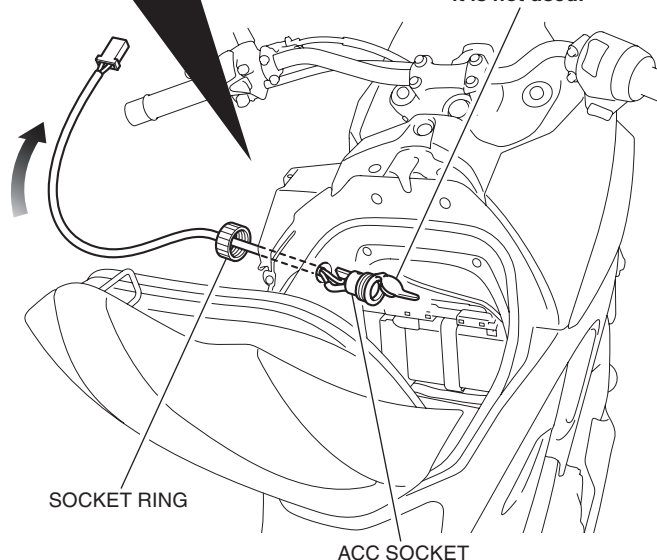


8. Release the motorcycle's 6-pin waterproof connector as shown.

- **This step is not required for the motorcycle equipped with the Sub harness.**

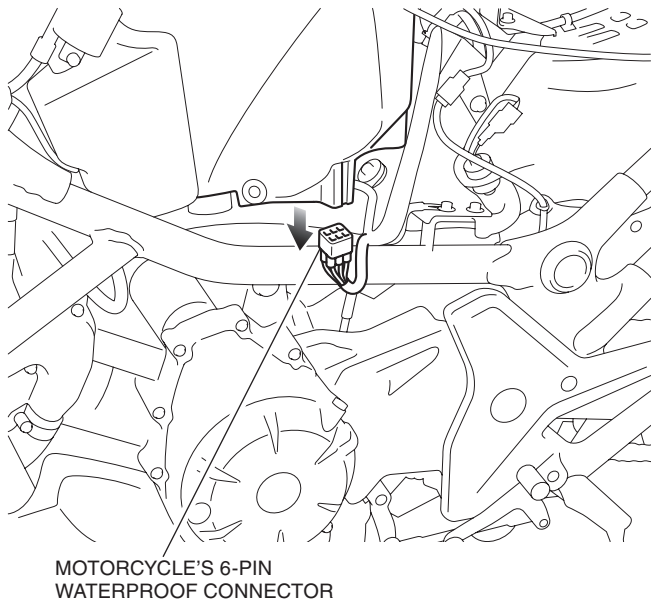


9. Connect the sub harness as shown.

- **This step is not required for the motorcycle equipped with the Sub harness.**

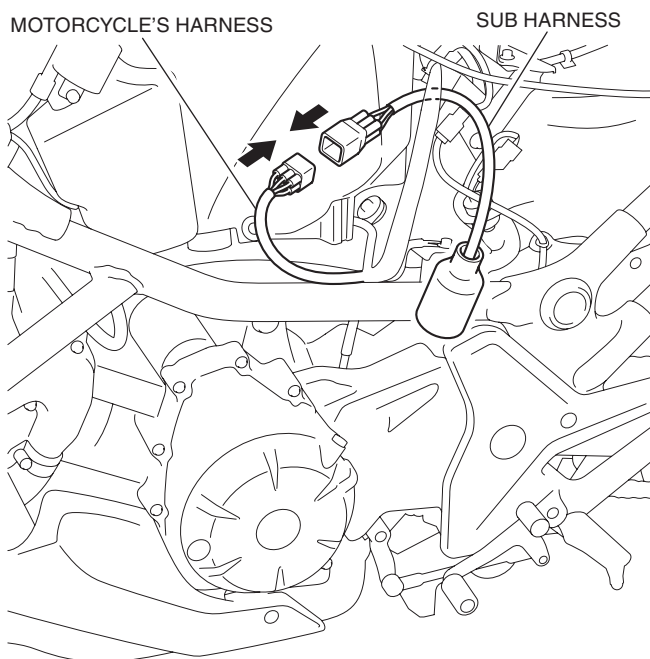


10. Secure the 6-pin waterproof connector with an electrical tape as shown.



- **This step is not required for the motorcycle equipped with the Sub harness.**

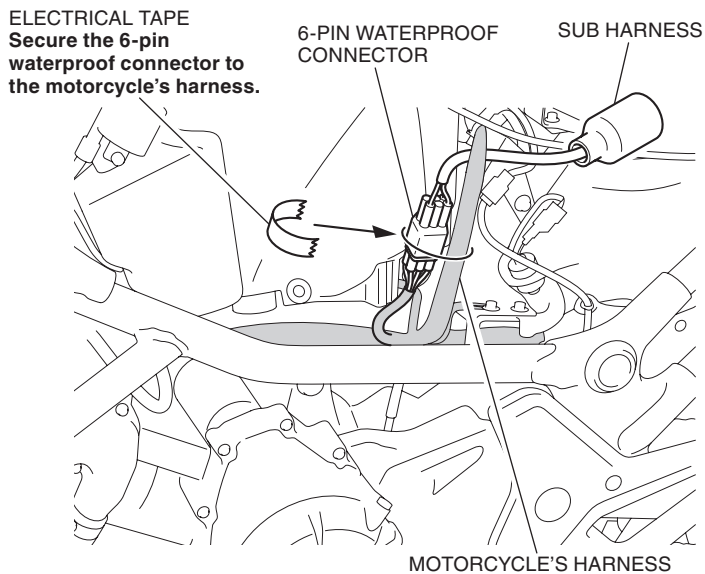


11. Connect the ACC harness as shown.

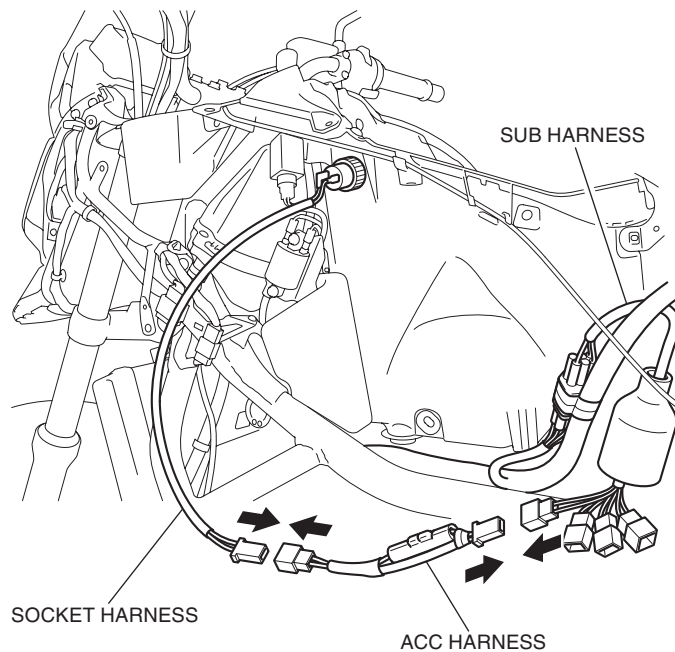


12. Cover the connectors with the harness boot as shown.

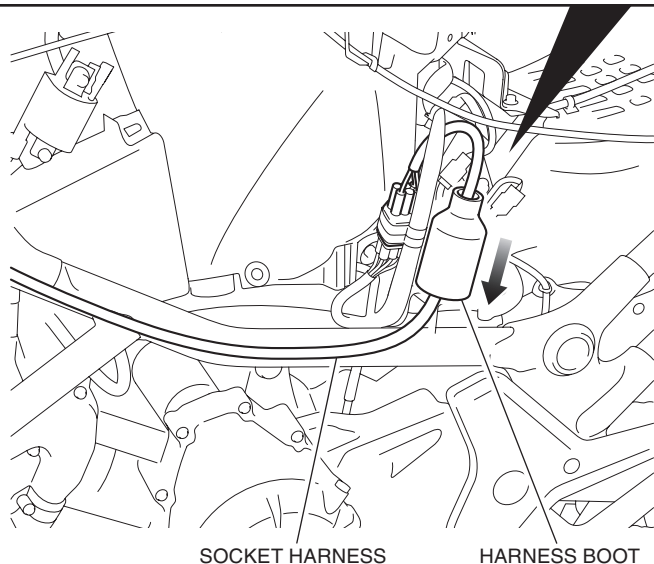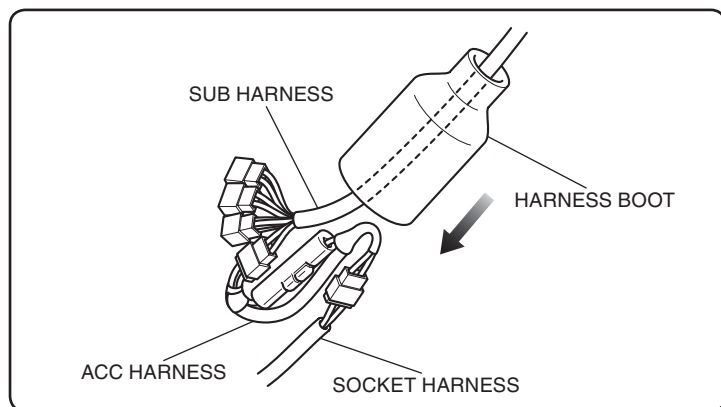

13. Secure each harness with the wire tie as shown.

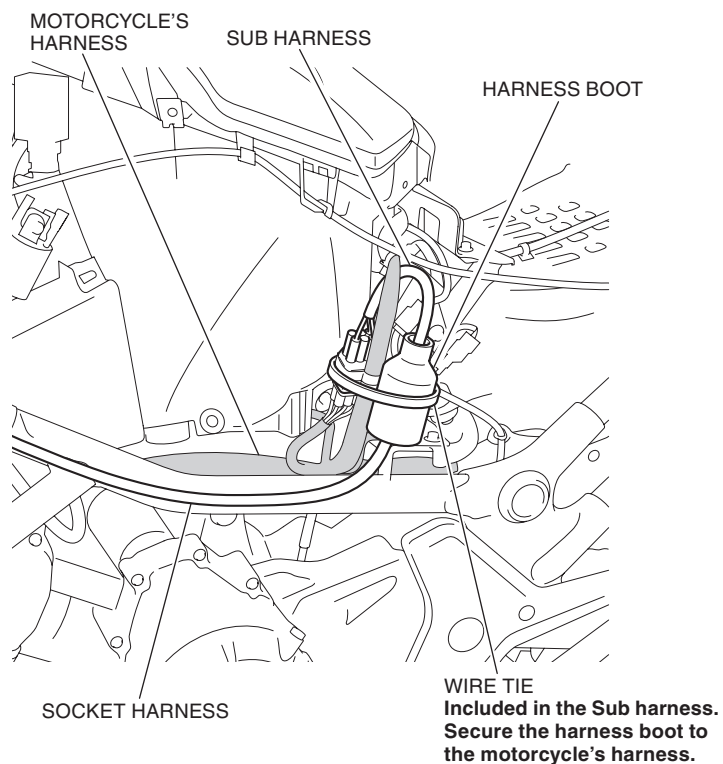


14. Bundle the socket harness and secure it with the wire tie as shown.

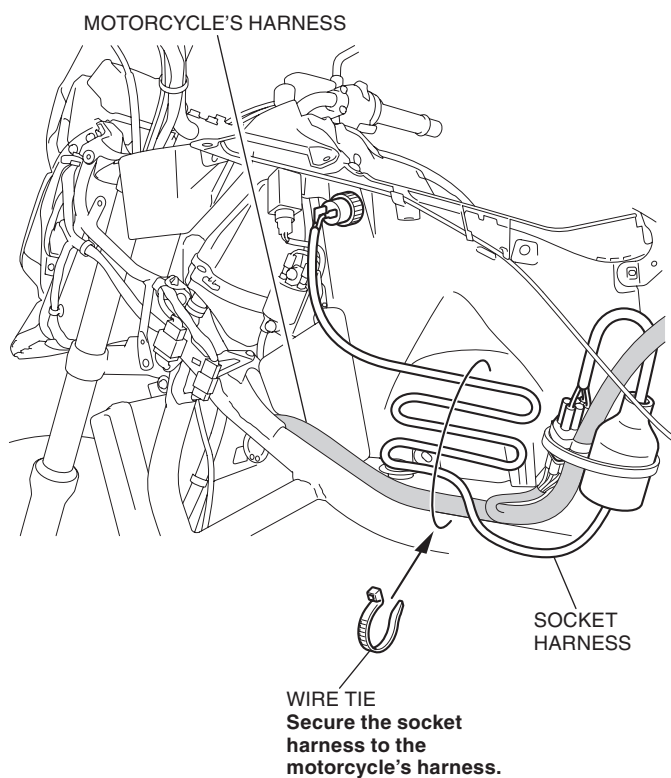

15. Attach the caution label in the position shown.

CAUTION LABEL
Before attaching, thoroughly
clean the area where the
caution label will be attached.

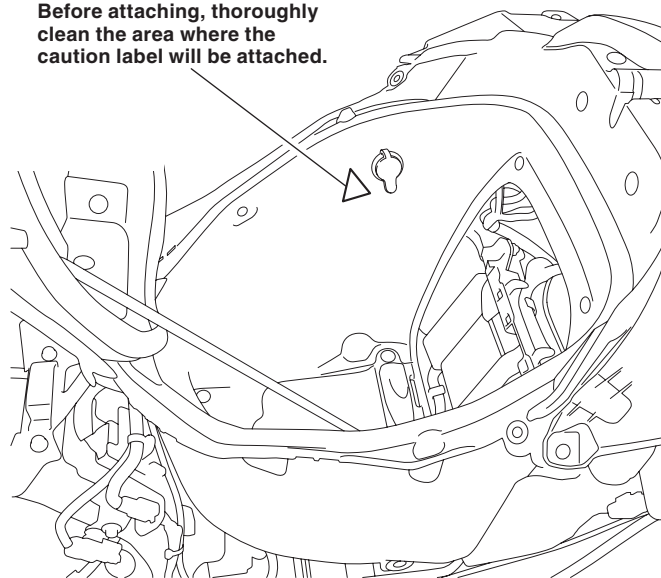


16. Install the motorcycle's parts in the reverse order of removal.

- Confirm that the harness is not caught or too tight.


ACC SOCKET INSTALLATION <NC700S/SA/SD>

1. Refer to the Service Manual for the motorcycle, remove the motorcycle parts, and disconnect the negative cable from the battery.

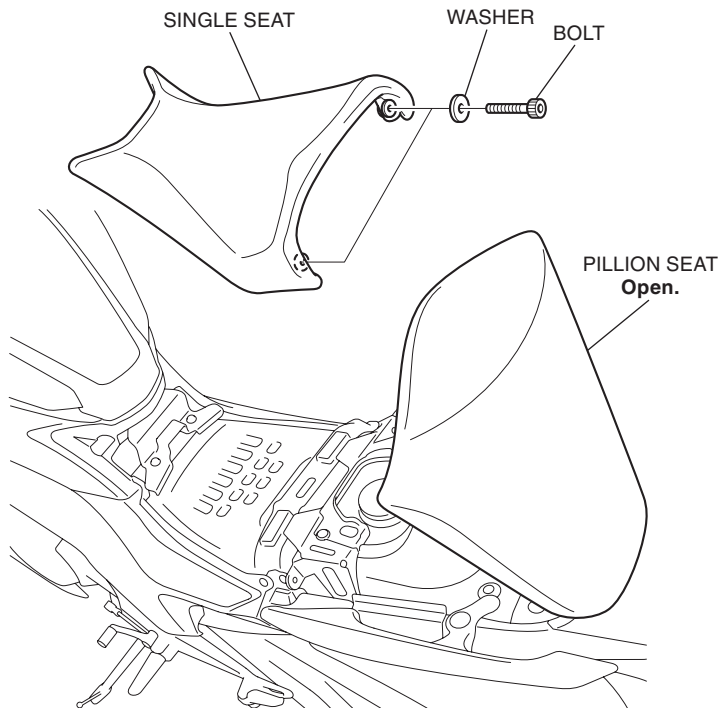


2. Refer to the Service Manual for the motorcycle, remove the motorcycle parts.

- Repeat on the right side.

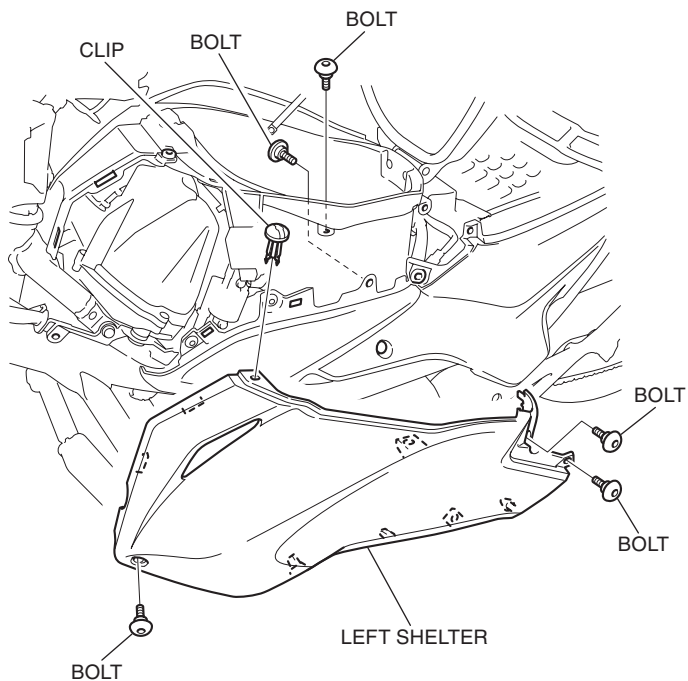


3. Remove the clip and open the front part of the left seat cowl slightly as shown.

- Repeat on the right side.

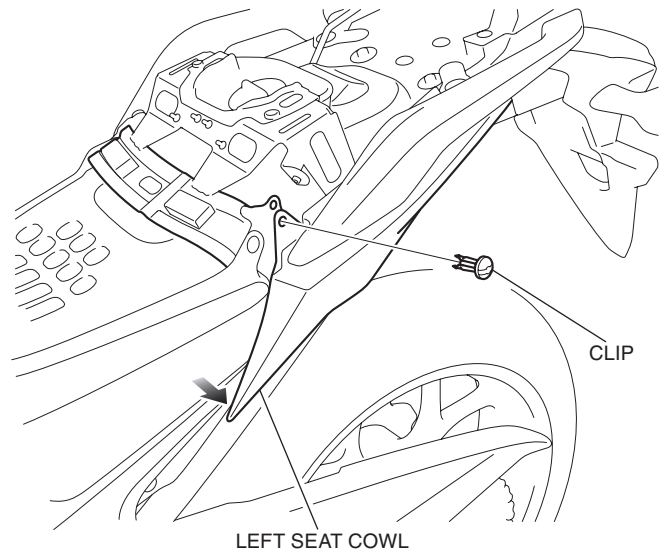

4. Refer to the Service Manual for the motorcycle, remove the motorcycle parts.



- Repeat on the right side.

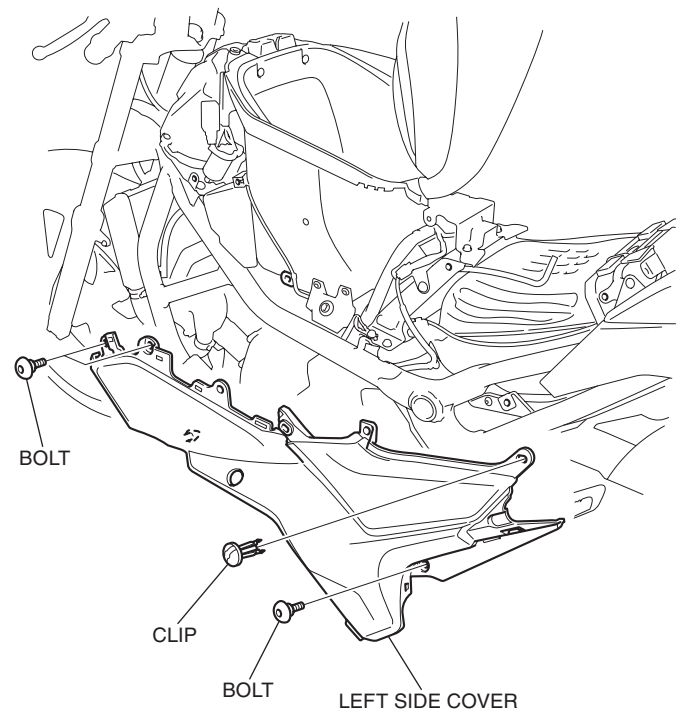

5. Drill a 30 mm hole along the factory marked line on the side of the luggage box using an electric drill and hole saw.


- Remove any burrs from the edge of the hole.

Mark with an awl in the position shown.

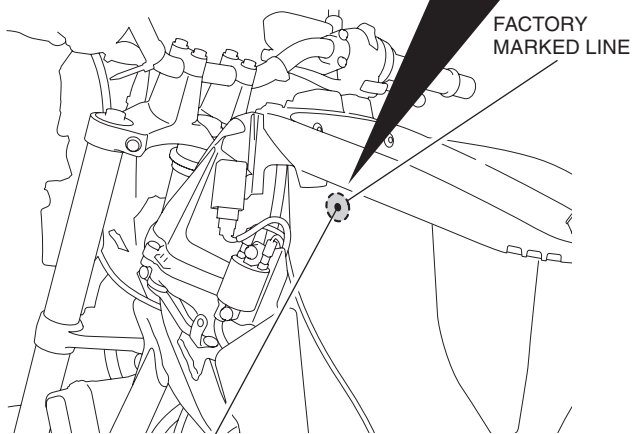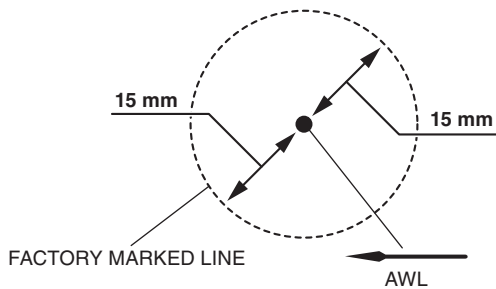



ELECTRIC DRILL
(30 mm HOLE SAW)
Drill at the marked point.

6. Install the ACC socket as shown.

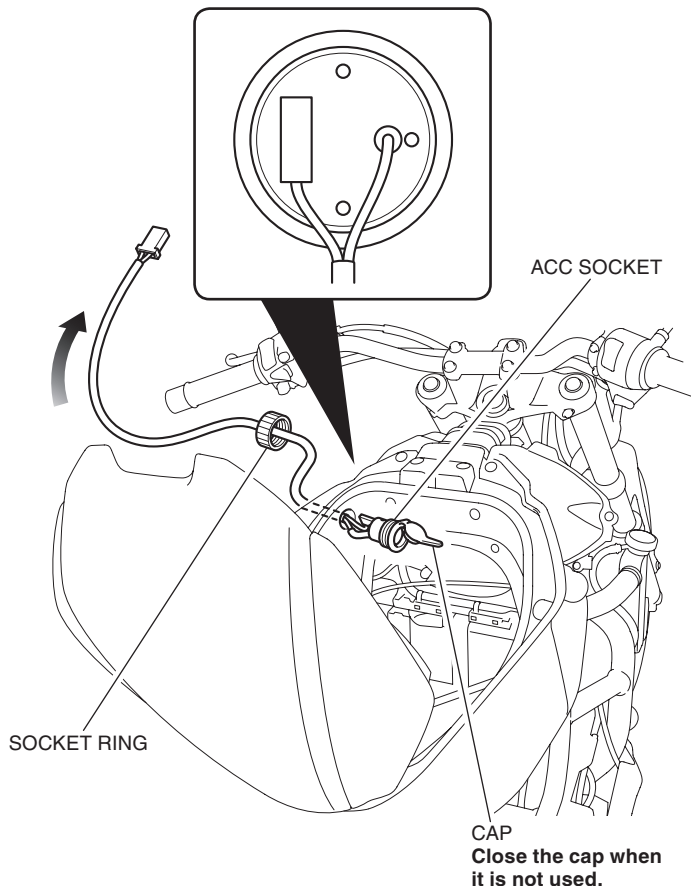


7. Release the motorcycle's 6-pin waterproof connector as shown.

- This step is not required for the motorcycle equipped with the Sub harness.

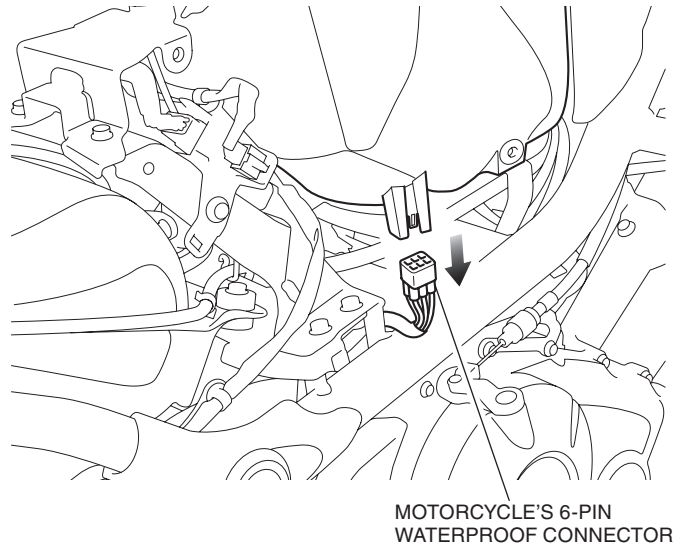


8. Connect the sub harness as shown.

- This step is not required for the motorcycle equipped with the Sub harness.

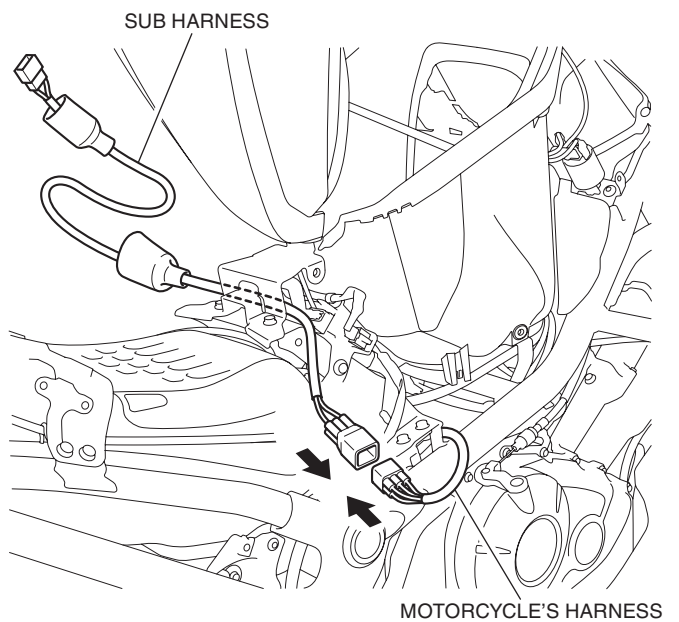



9. Pull the sub harness as shown.

- **This step is not required for the motorcycle equipped with the Sub harness.**

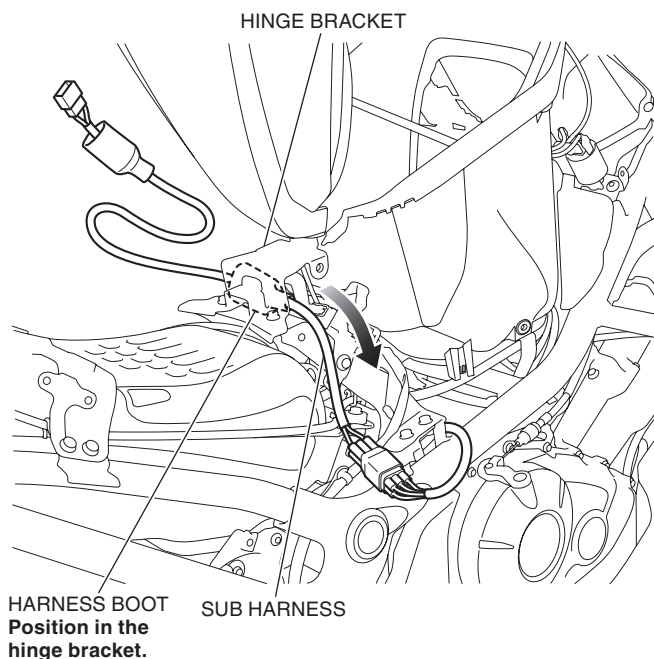


10. Secure the 6-pin waterproof connector with an electrical tape as shown.



- **This step is not required for the motorcycle equipped with the Sub harness.**

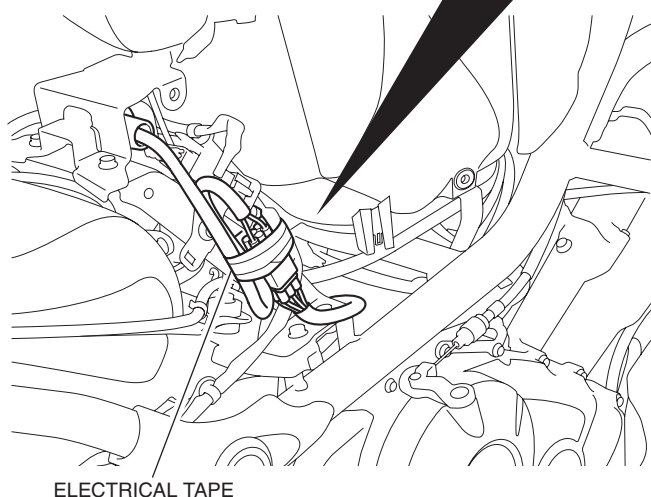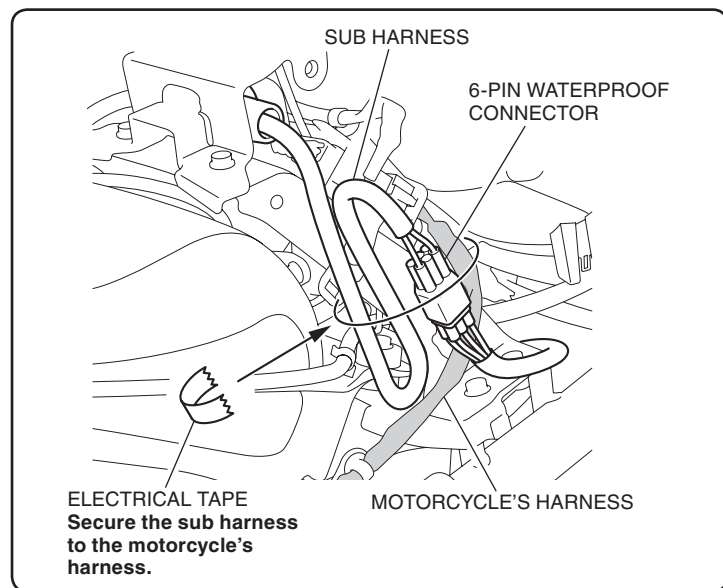


11. Connect the ACC harness as shown.

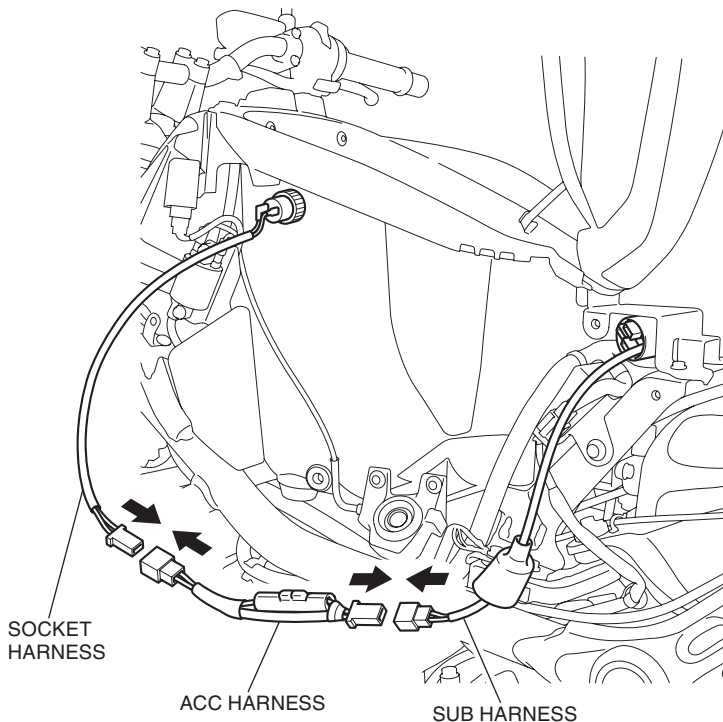


12. Cover the connectors with the harness boot as shown.

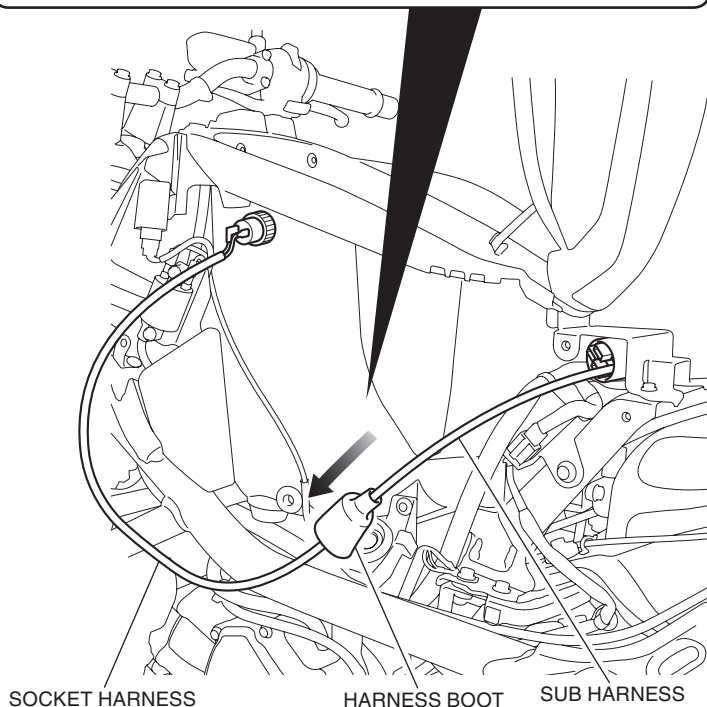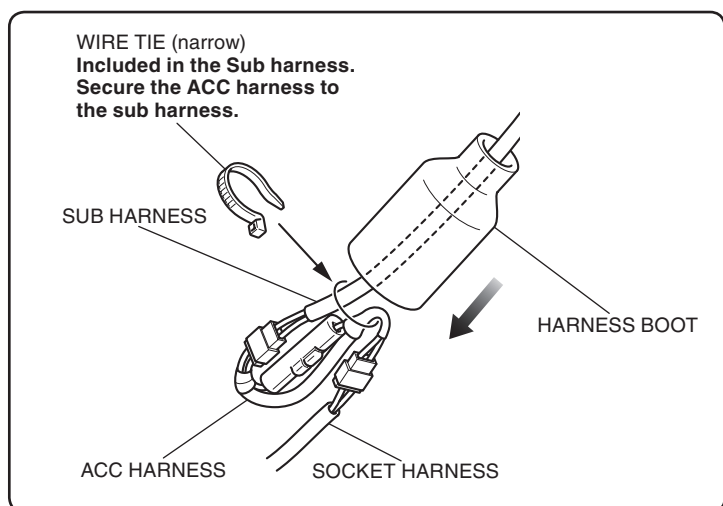

13. Secure the sub harness with the wire tie as shown.

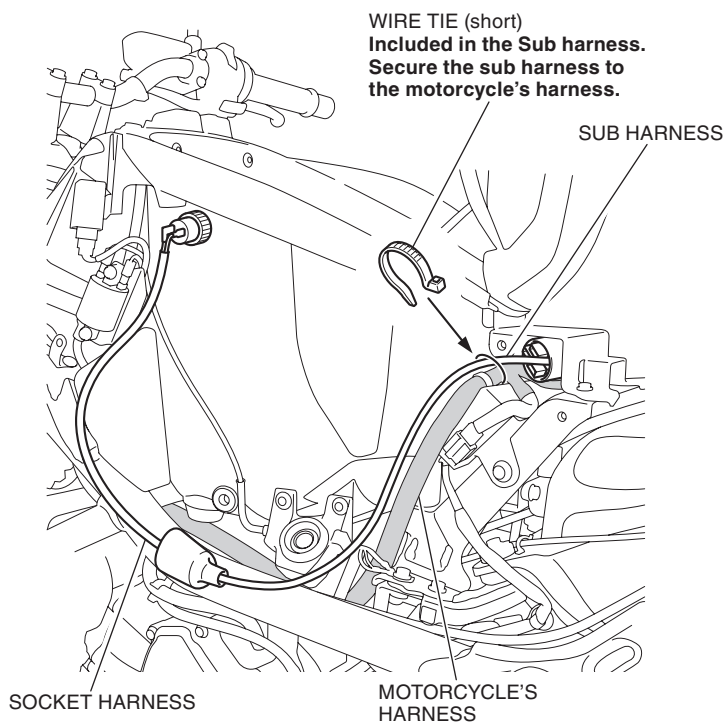


14. Bundle and secure each harness as shown.

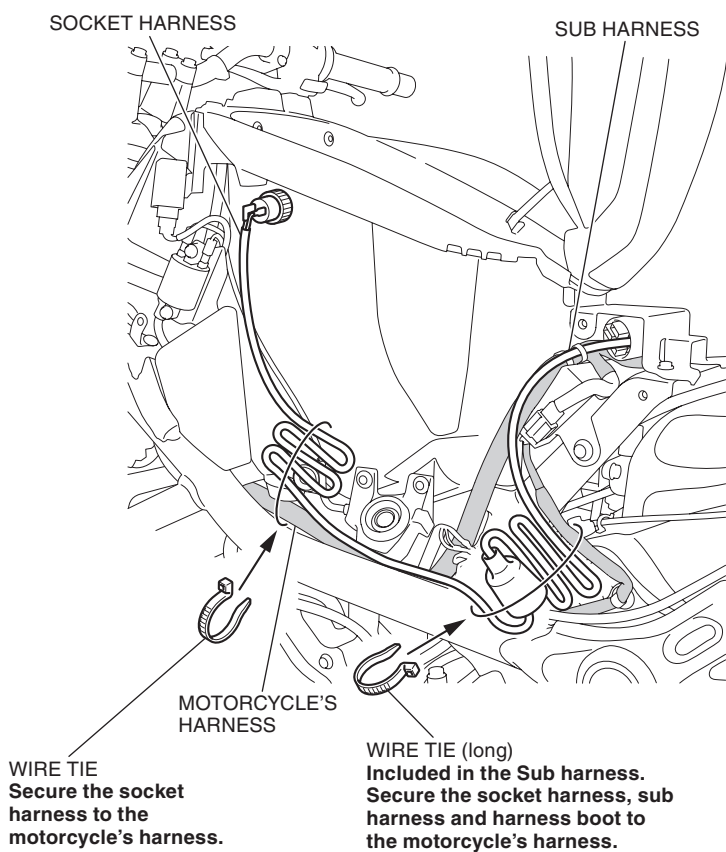

15. Attach the caution label in the position shown.

CAUTION LABEL
Before attaching, thoroughly clean the area where the caution label will be attached.

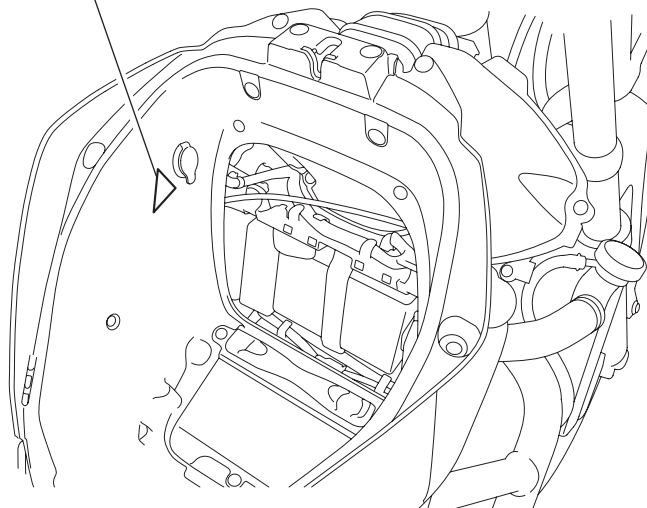

16. Install the motorcycle's parts in the reverse order of removal.

- **Confirm that the harness is not caught or too tight.**