



INSTALLATION INSTRUCTIONS


Accessory
FENDER C
P/N 08F70-MKR-D10

Application
CBR1000ST/SP

Publication No.
MII
Issue Date
December 2019

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

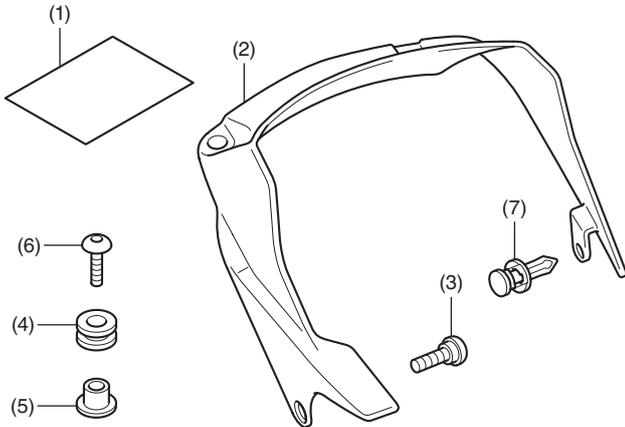

No.	Description	Qty
(1)	URL paper	1
(2)	Rear fender C	1
(3)	6 mm socket bolt (6 x 18 mm)	1
(4)	Grommet	2
(5)	Flange collar	2
(6)	5 mm socket bolt (5 x 25 mm)	2
(7)	Clip	1

TOOLS REQUIRED

- Hex wrench (5 mm)
- Torque wrench

TORQUE INFORMATION

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N·m	kgf·m	lbf·ft
5 mm socket bolt	5.2	0.5	3.8
6 mm socket bolt	10	1.0	7

INSTALLATION


⚠ CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc. to cool before installing the accessory.

NOTE:

- Take care not to damage the painted surfaces of the motorcycle.
- Save all removed parts unless otherwise indicated.
- Illustration shows CBR1000ST type, another type is similar.**

1. Refer to the Service Manual for the motorcycle, remove the motorcycle parts.

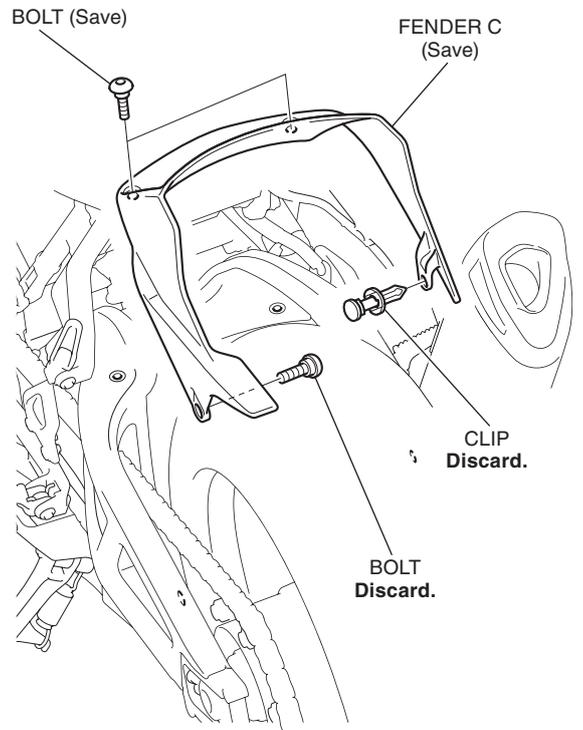

2. Install the rear fender C as shown.

